
HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODELS	1-2
--------------	-----

MODELS

<HATCHBACK>

Model code		Engine model	Transmission model	Fuel supply system
DA1A	LNSEL6/R6	4G92-SOHC (1,597 ml)	F5MR1 (2WD-5M/T)	MPI
	LNUEL6/R6			
	LRUEL6/R6		F4A41 (2WD-4A/T)	
	LNGEL6/R6		F5MR1 (2WD-5M/T)	
	LRGEL6/R6		F4A41 (2WD-4A/T)	
DA2A	LNSCL6/R6	4G93-DOHC (1,834 ml)	F5M42 (2WD-5M/T)	GDI
	LNUCL6/R6			
	LRUCL6/R6		F4A42 (2WD-4A/T)	
	LRUCL6C/R6C		F4A42 (2WD-Sports Mode 4A/T)	
	LNGCL6/R6		F5M42 (2WD-5M/T)	
	LRGCL6/R6		F4A42 (2WD-4A/T)	
	LNXCL6/R6		F5M42 (2WD-5M/T)	
	LRXCL6/R6		F4A42 (2WD-4A/T)	
	DA5A		LNSFL6/R6	
LNUFL6/R6				
LNXFL6/R6				
LNUVL6/R6		F9Q2 (1,870 ml)		
LNXVL6/R6				
LNGVL6/R6				

<SEDAN>

Model code		Engine model	Transmission model	Fuel supply system
DA1A	SNSEL6/R6	4G92-SOHC (1,597 ml)	F5MR1 (2WD-5M/T)	MPI
	SNUEL6/R6			
	SRUEL6/R6		F4A41 (2WD-4A/T)	
	SNGEL6/R6		F5MR1 (2WD-5M/T)	
	SRGEL6/R6		F4A41 (2WD-4A/T)	

Model code		Engine model	Transmission model	Fuel supply system
DA2A	SNSCL6/R6	4G93-DOHC (1,834 ml)	F5M42 (2WD-5M/T)	GDI
	SNUCL6/R6			
	SRUCL6/R6		F4A42 (2WD-4A/T)	
	SRUCL6C/R6C		F4A42 (2WD-Sports Mode 4A/T)	
	SNGCL6/R6		F5M42 (2WD-5M/T)	
	SRGCL6/R6		F4A42 (2WD-4A/T)	
	SNXCL6/R6		F5M42 (2WD-5M/T)	
	SRXCL6/R6		F4A42 (2WD-4A/T)	
DA5A	SNSFL6/R6	F9Q1 (1,870 ml)	F5MV1 (2WD-5M/T)	Fuel injection pump
	SNUFL6/R6			
	SNXFL6/R6			
	SNUVL6/R6	F9Q2 (1,870 ml)		
	SNXVL6/R6			
	SNGVL6/R6			