






SINGLE PART INSTALLATION POSITION

CONTENTS



RELAY	3-2	SENSOR	3-4
ECU	3-3	EARTH	3-7
SOLENOID VALVE	3-3		

RELAY

Name	Symbol	Name	Symbol
Additional heater relay 1, 2 <F9Q>	A	Glow plug relay box <F9Q>	C
Condenser fan relay (LO)	B	Main relay <F9Q>	D

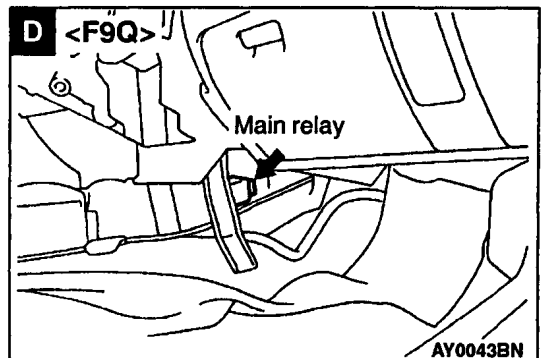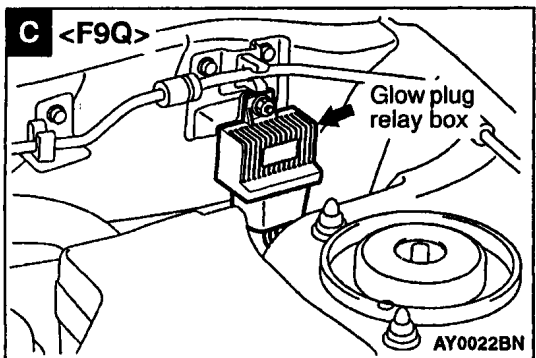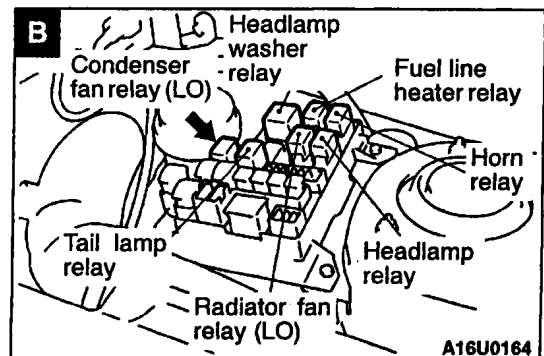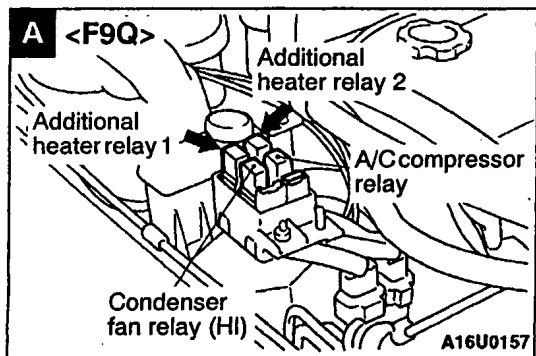
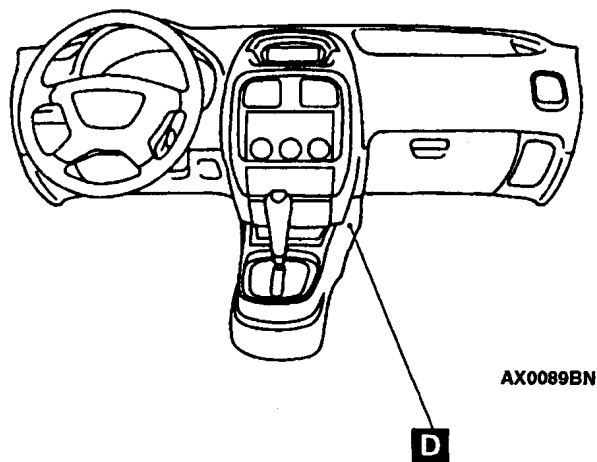
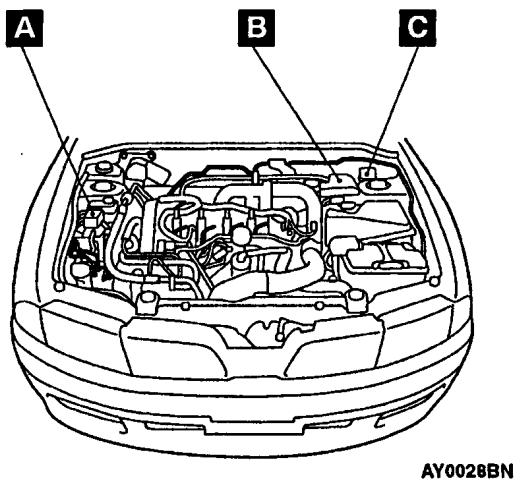



ECU

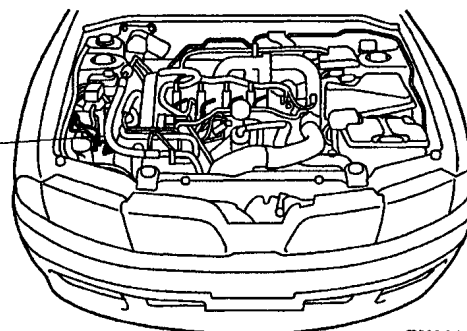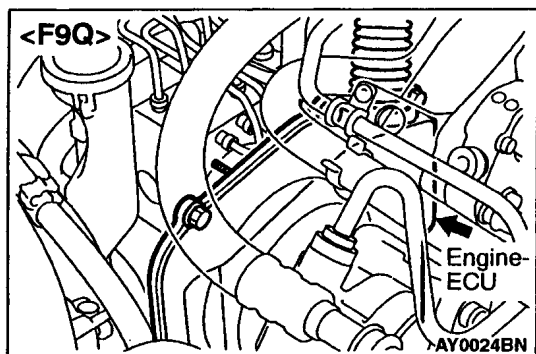

SOLENOID VALVE

Name	Symbol	Name	Symbol
EGR solenoid valve <F9Q>	C	Turbocharger solenoid valve <F9Q>	B
Throttle solenoid valve <F9Q>	A		

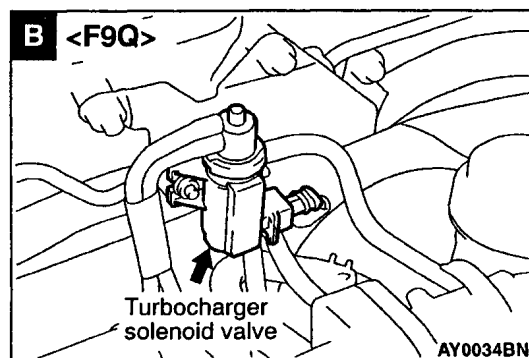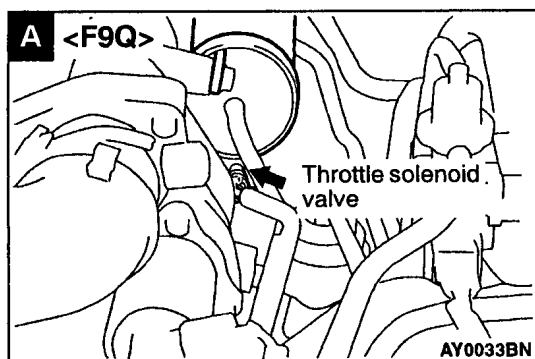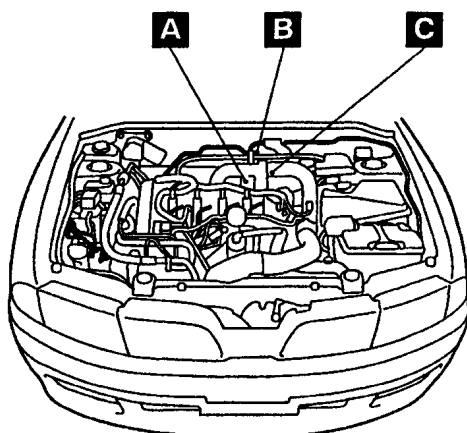


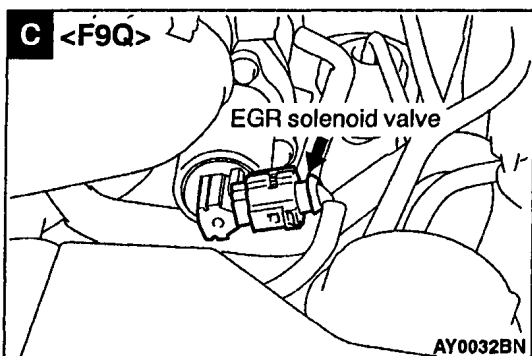


SENSOR

Name	Symbol	Name	Symbol
Accelerator pedal position sensor <F9Q>	J	Ignition failure sensor <Petrol>	A
Advance actuator <F9Q>	D	Outside thermo sensor	C
Air flow sensor <F9Q>	F	Oxygen sensor (Front) <Petrol>	B
Boost sensor <F9Q>	F	Oxygen sensor (Rear) <Petrol>	K
Catalytic temperature sensor <4G93>	K	Rail pressure sensor <F9Q>	I
Engine coolant temperature sensor <F9Q>	E	Top dead center and engine speed sensor <F9Q>	H
Fuel temperature sensor <F9Q>	I	Vehicles speed sensor <F9Q>	G



<4G92>

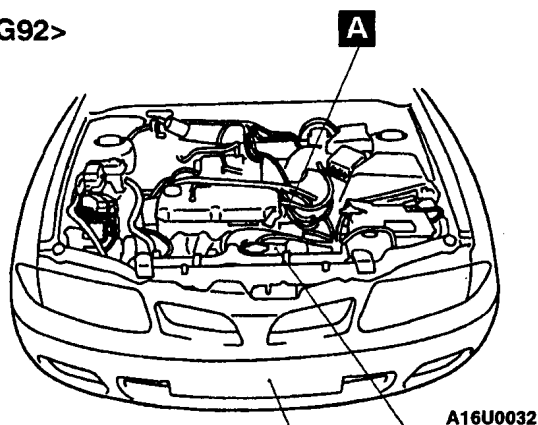


<4G93>






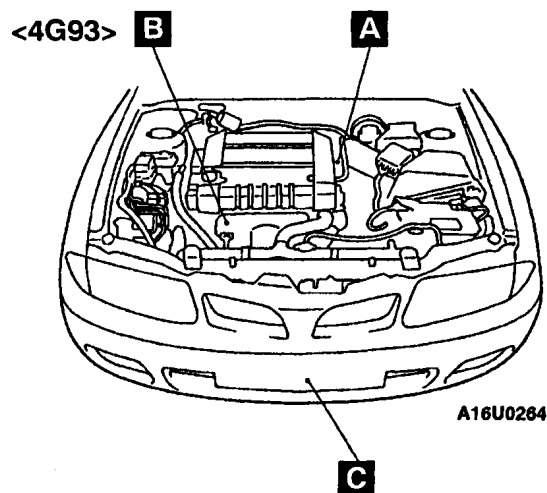









<F9Q>

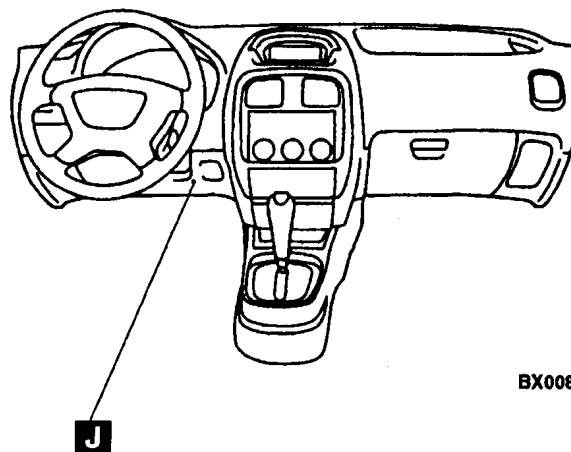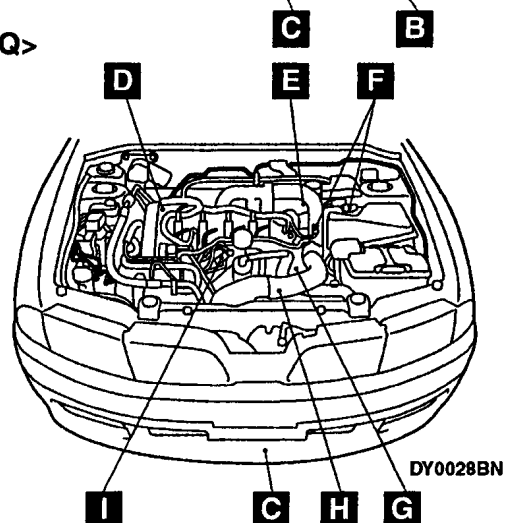

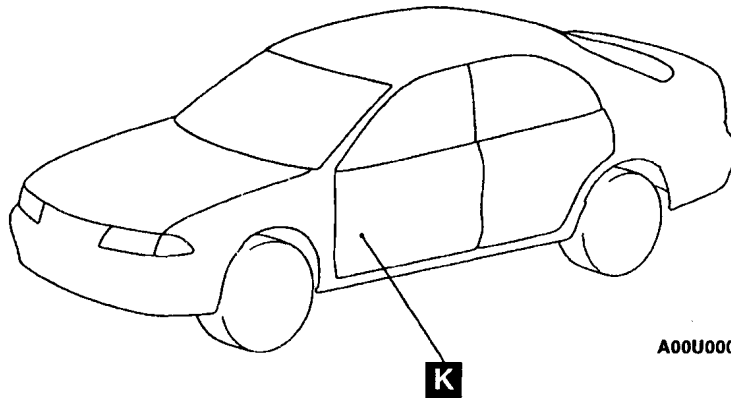


A00U0001

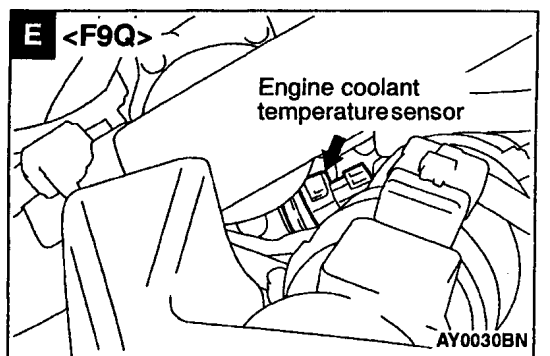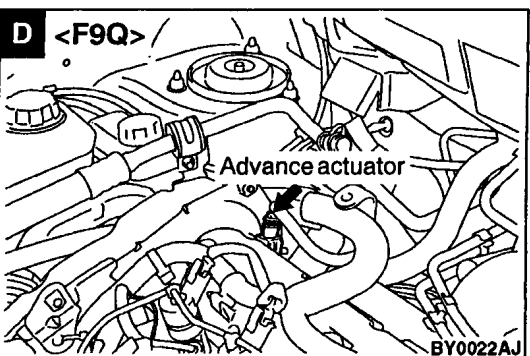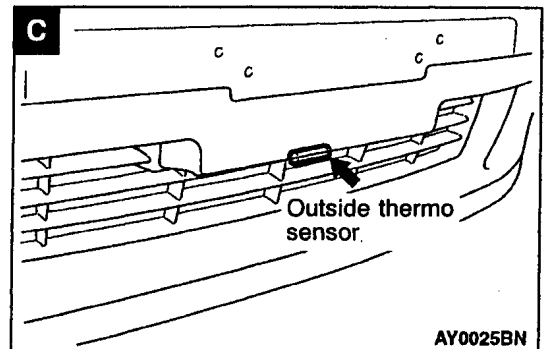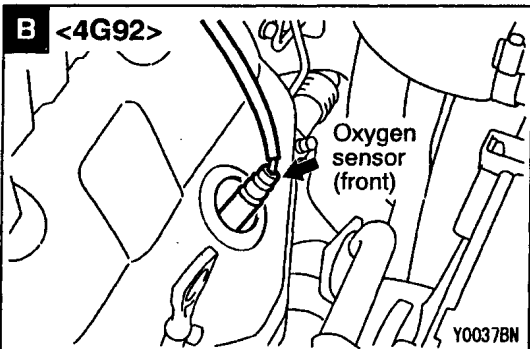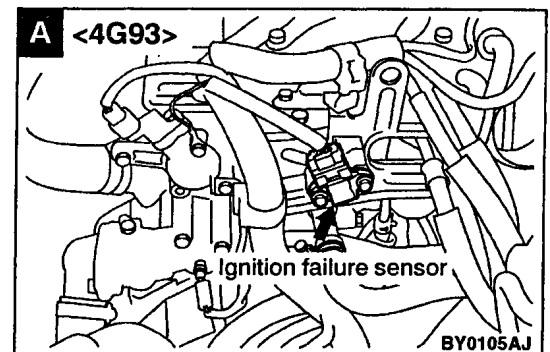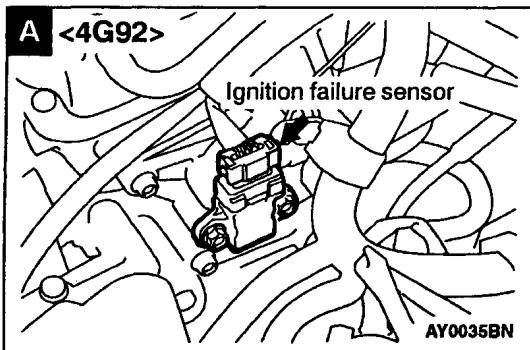

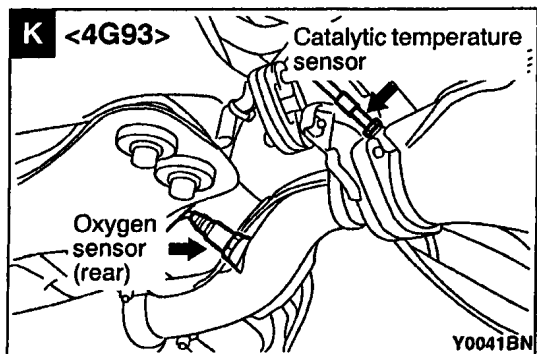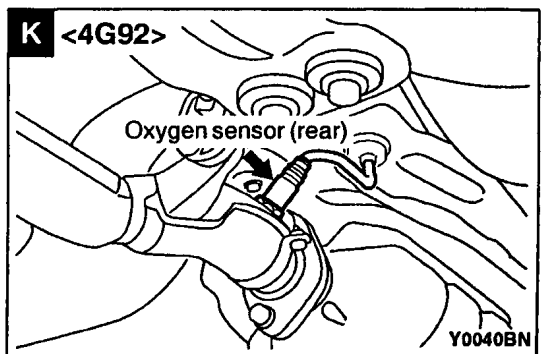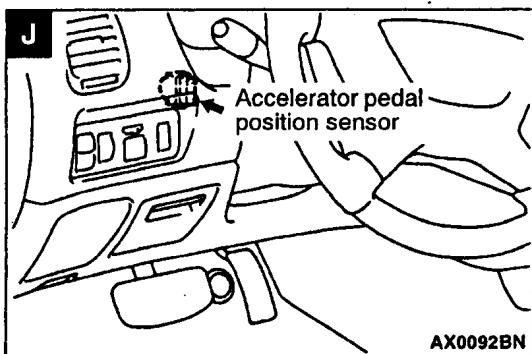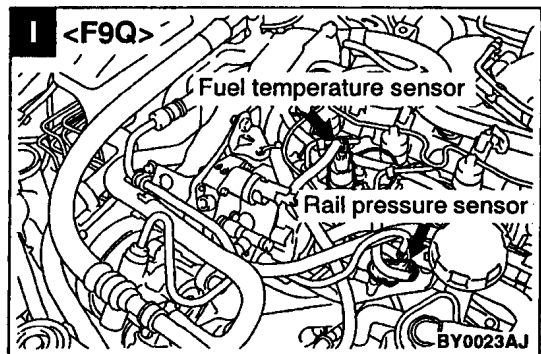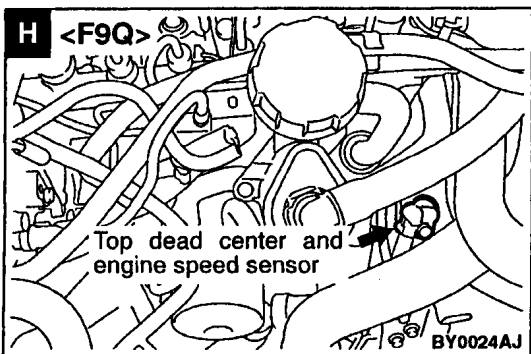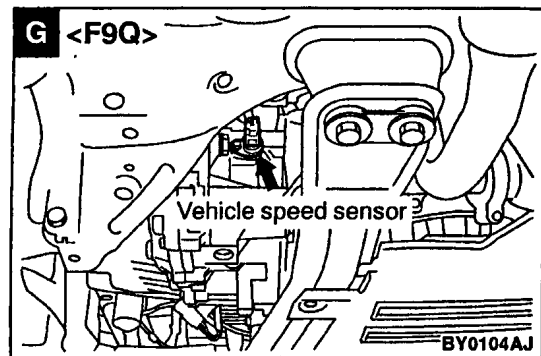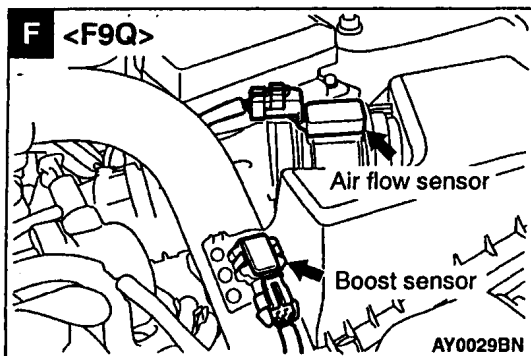

EARTH

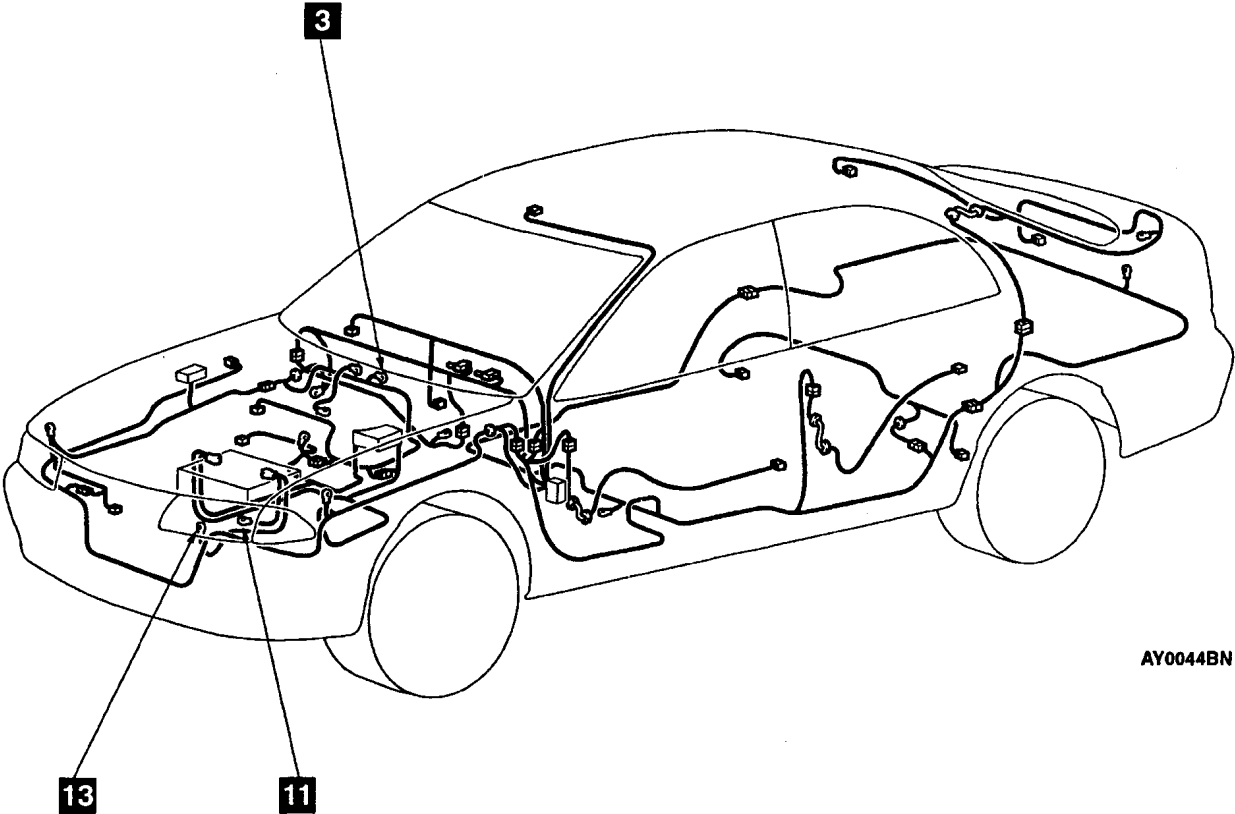

AY0044BN

