

TRANSMISSION REMOVAL & INSTALLATION - A/T

Article Text

1992 Mitsubishi Mirage

For Dan's Transmission Service 10 Jefferson Place Fort Walton Beach FL 32548

© 1997 Mitchell Repair Information Company, All Rights Reserved.

Monday, April 01, 2002 09:06AM

ARTICLE BEGINNING

1991-92 TRANSMISSION SERVICING
Transmission Removal & Installation

Mitsubishi: Eclipse, Galant, Mirage, Montero,
Pickup, Precis, 3000GT

MANUAL

NOTE: For manual transmission/transaxle replacement procedures,
see appropriate article in CLUTCHES.

AUTOMATIC FWD MODELS

REMOVAL

1) Remove battery and battery tray. On 3000GT, remove undercover(s). On Eclipse turbo, drain and remove intercooler. On all models, remove air cleaner and case. Raise and support vehicle. Remove wheels. Disconnect control cables at transaxle. Drain transaxle fluid.

2) On Mirage 1.6L, disconnect tension rod. On all models, disconnect neutral safety switch connector, oil cooler hoses and electrical connectors from transaxle. Disconnect speedometer cable and throttle control cable (if equipped). Remove starter motor.

3) On Galant models with electronically controlled suspension, remove air compressor and bracket. Disconnect front height sensor rod at lower control arm.

4) On all models, remove upper transaxle-to-engine bolts. Remove engine undercover (if equipped). On all models, remove drive axle shafts. See FWD AXLE SHAFTS article in DRIVE AXLES. Separate lower control arms from struts for access to axle shafts (if necessary).

5) Remove front exhaust pipe (if necessary). On Eclipse 4WD, Galant 4WD and 3000GT, remove right member and gusset. On 4WD models, separate transfer assembly from transaxle. Reference mark transfer assembly-to-drive shaft and remove transfer assembly.

6) On all models, remove transmission inspection (dust) cover. Place index mark on torque converter and drive plate for reassembly reference. Remove torque converter-to-drive plate bolts. Push torque converter away from engine into transaxle.

7) Support transaxle with jack. Remove transaxle mounts bolts, mounting brackets and remaining transaxle-to-engine bolts. Slide transaxle assembly to right and lower to remove.

CAUTION: Ensure torque converter is fully seated in transaxle before installation. Always install new snap rings on inner constant velocity joints.

INSTALLATION

1) To install, reverse removal procedure. Tighten transaxle-to-engine bolts and torque converter-to-drive plate bolts to specification. See TORQUE SPECIFICATIONS table at end of article.

2) Ensure reference marks on torque converter-to-drive plate

TRANSMISSION REMOVAL & INSTALLATION - A/T

Article Text (p. 2)

1992 Mitsubishi Mirage

For Dan's Transmission Service 10 Jefferson Place Fort Walton Beach FL 32548

© 1997 Mitchell Repair Information Company, All Rights Reserved.

Monday, April 01, 2002 09:06AM

and transfer assembly-to-drive shaft align. Tighten mounting bolts with weight of engine and transaxle on mounts. Refill transaxle fluid to specified level. Adjust all control cables.

RWD MODELS

REMOVAL

1) Disconnect negative battery cable. Remove front exhaust pipe. On Montero, remove transfer case shift lever knob, dust boot and retainer plate or console. Remove transfer case gearshift assembly.

2) On all models, raise and support vehicle. Remove undercarriage cover and/or skid plate(s). Drain transmission and transfer case (if applicable). Place reference mark on drive shaft(s) and remove. Disconnect all external solenoid and switch connections.

3) Disconnect speedometer cable and control cables at transmission. Remove starter and bellhousing cover. Place reference mark on torque converter and drive plate for reassembly reference. Remove torque converter bolts.

4) Disconnect transmission cooler lines. Remove oil filler tube. Secure transmission on a jack. Raise transmission slightly to take weight off mount. Remove crossmember-to-mount bolts and crossmember.

5) Remove transfer case mounting bracket and mount (if equipped). Remove transmission-to-engine mounting bolts. Carefully lower transmission from vehicle.

CAUTION: Ensure torque converter is fully seated in transmission before installation.

INSTALLATION

1) To install, reverse removal procedure. Tighten transmission-to-engine bolts and torque converter-to-drive plate bolts to specification. See TORQUE SPECIFICATIONS table at end of article. Tighten mount bolts with weight of engine and transmission on mounts. Ensure reference marks on drive shaft(s) and torque converter-to-drive plate align.

2) Apply sealant to transfer case gearshift assembly gasket before installation. Coat transmission oil filler tube "O" ring with transmission fluid before installation. Refill transmission fluid to specified level. Adjust all control cables.

TORQUE SPECIFICATIONS

TORQUE SPECIFICATIONS

Applications	Ft. Lbs. (N.m)
FWD Models	
Torque Converter-To-Drive Plate Bolt	
Precis	53-55 (72-76)
All Others	34-38 (46-52)
Transaxle-To-Engine Block Bolt	
Mirage	

TRANSMISSION REMOVAL & INSTALLATION - A/T

Article Text (p. 3)

1992 Mitsubishi Mirage

For Dan's Transmission Service 10 Jefferson Place Fort Walton Beach FL 32548

© 1997 Mitchell Repair Information Company, All Rights Reserved.

Monday, April 01, 2002 09:06AM

8-mm Bolt	(1)
10-mm Bolt	22-25 (30-34)
12-mm Bolt	31-40 (42-54)
Eclipse & Galant		
8-mm Bolt	(1)
10-mm Bolt	22-25 (30-34)
Precis		
8-mm Bolt	22-25 (30-34)
10-mm Bolt	31-40 (42-54)
3000GT		
Upper Coupling Bolts	54 (73)
Lower Coupling Bolts	65 (88)

RWD Models

Torque Converter-To-Drive Plate Bolt

Montero	25-30 (34-41)
Pickup	33-38 (45-52)

Transmission-To-Engine Block Bolt

Montero		
10x40-mm Bolt	22-30 (30-41)
12x40-mm Bolt	47-61 (64-83)
12x55-mm Bolt	58-72 (79-98)
Pickup		
10x16-mm Bolt	22-30 (30-41)
10x50-mm Bolt	31-40 (42-54)
10x70-mm Bolt	31-40 (42-54)

(1) - Tighten to 84-108 INCH lbs. (10-12 N.m).

END OF ARTICLE